
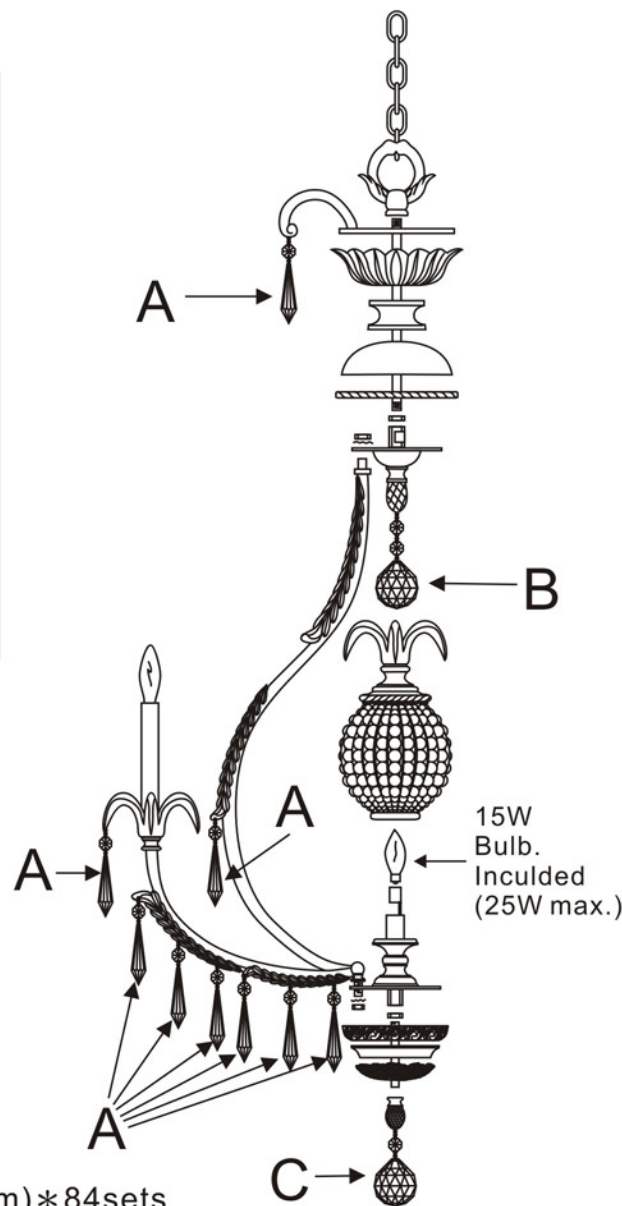
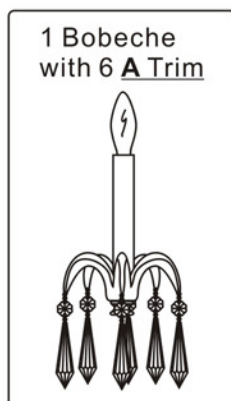


# MODEL#:32453 ASSEMBLY AND DRESSING INSTRUCTIONS

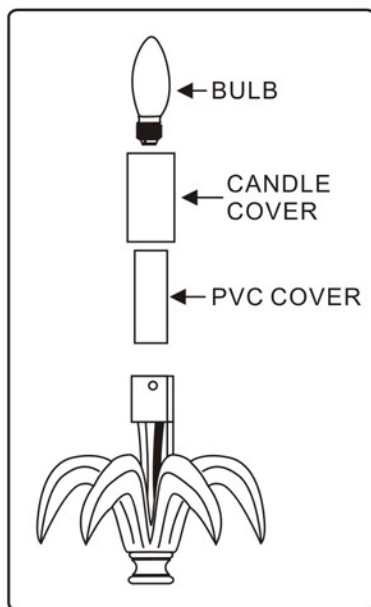

A= (14mm+38mm)\*84sets



B= (14mm x 2 + 40mm)\*1pc

C= (14mm + 40mm)\*1pc

# ITEM NUMBER:# 32453 INSTRUCTIONS



All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.

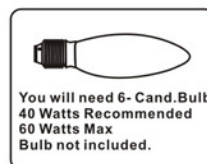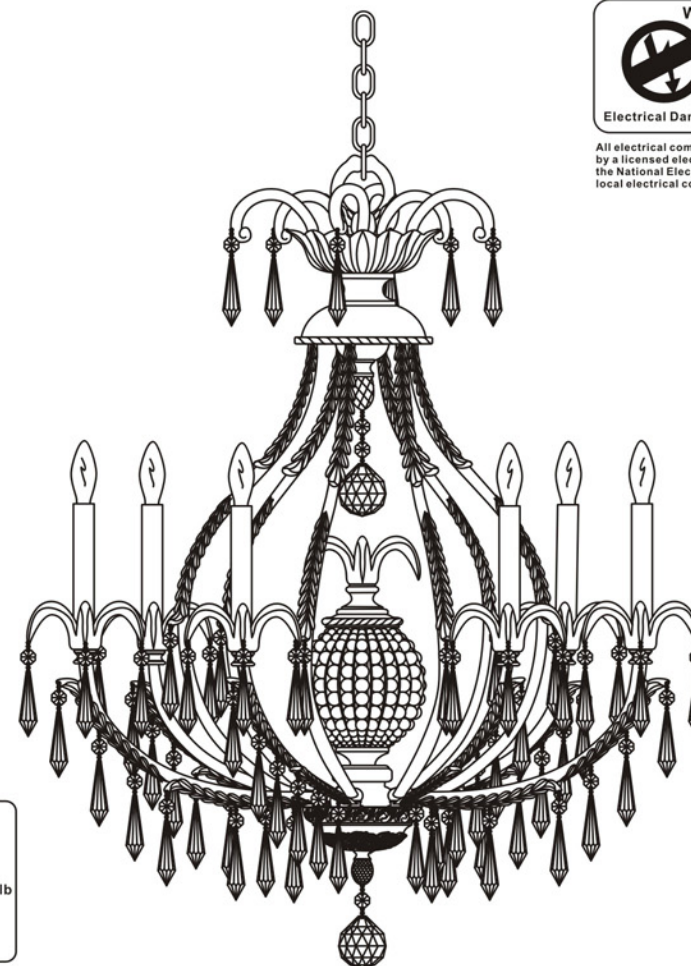

TI-32453 - 2008/4/9

